




7. Spare parts

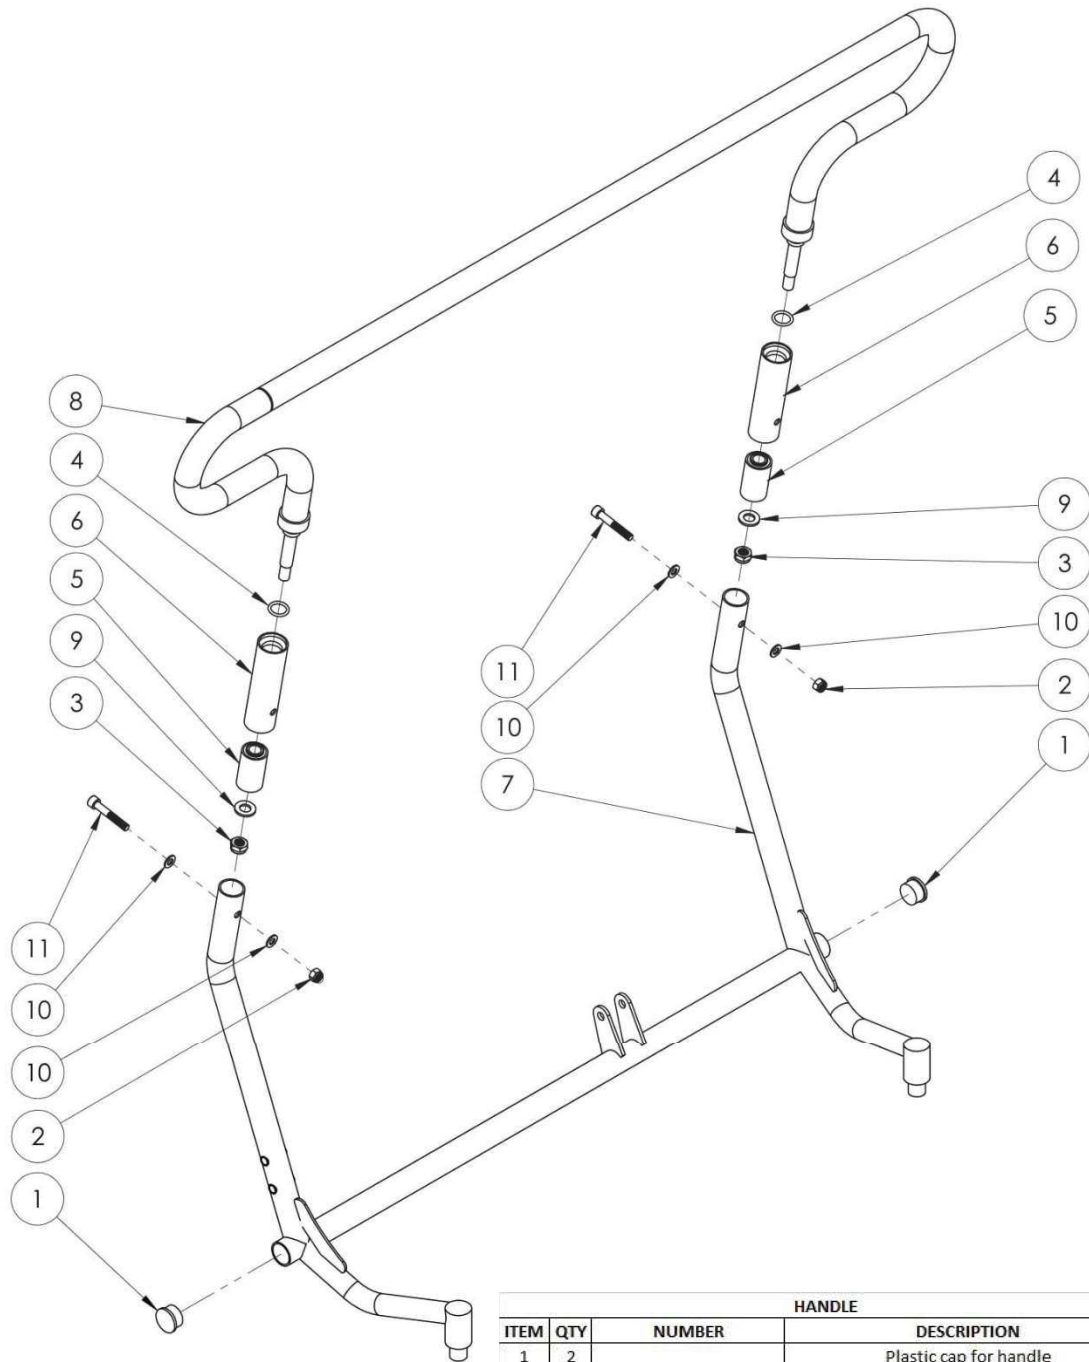


HANDLE			
ITEM	QTY	NUMBER	DESCRIPTION
1	2		Plastic cap for handle
2	2		Nut for handle assembly
3	2		Nut for junction
4	2		Top washer for junction
5	2		Spacer for handle
6	2		Handle junction
7	1	FGRIN0006	Lower handle
8	1	FGRIN0007	Top handle
9	2		Bottom washer for junction
10	4		Washer for handle assembly
11	2		Screw for handle assembly

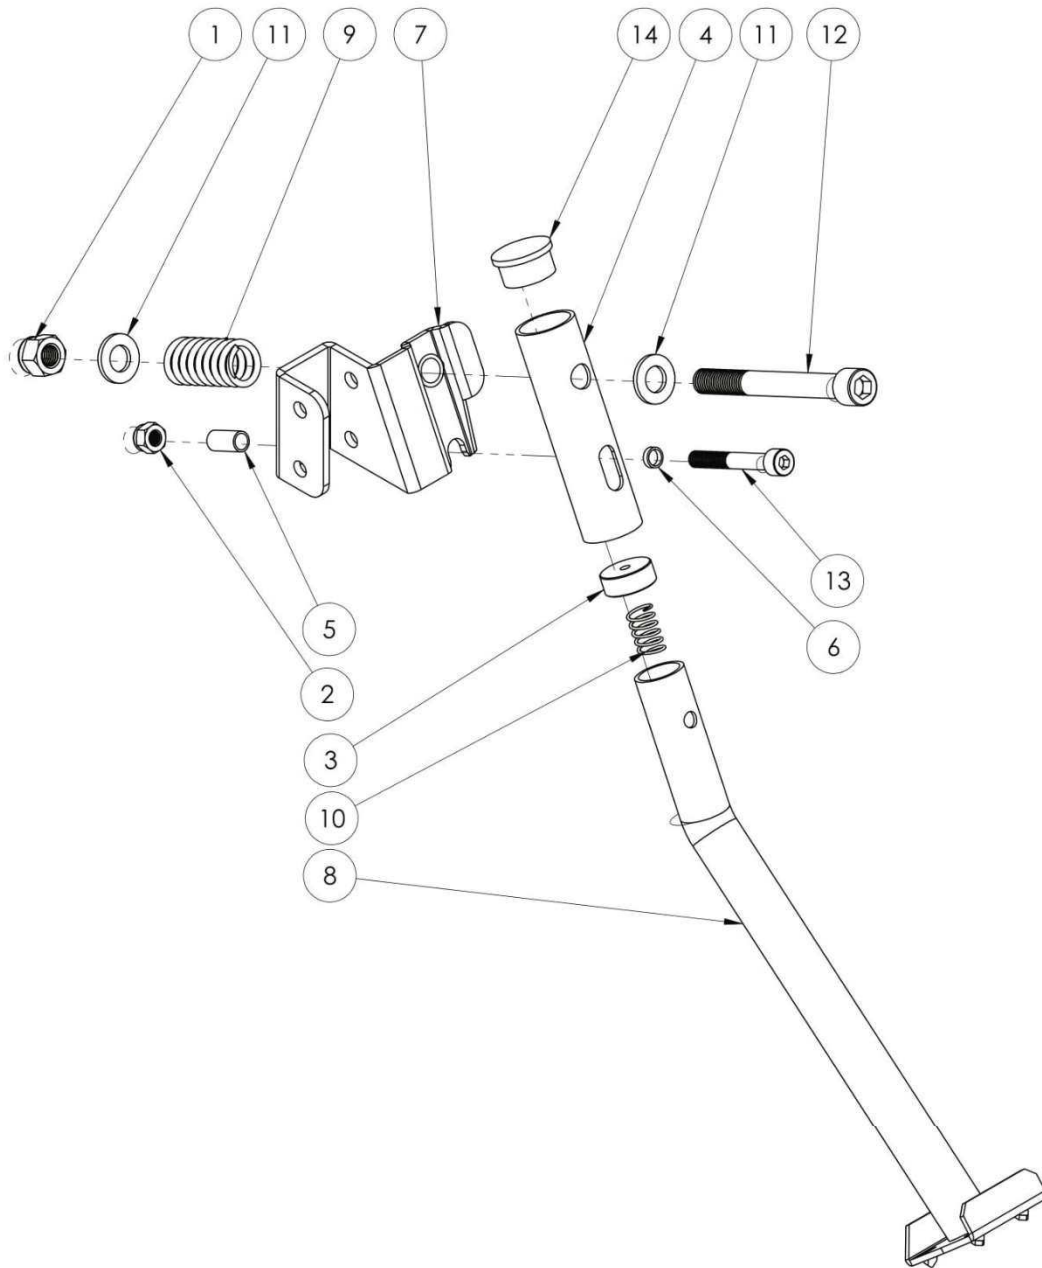



KICKSTAND			
ITEM	QTY	NUMBER	DESCRIPTION
1	1		Nut for pivot
2	1		Nut for lock assembly
3	1		Support washer
4	1		Pivot body
5	1		Spacer for lock assembly
6	1		Washer for lock assembly
7	1		Kickstand mounting bracket
8	1	FGRIN0008	Kickstand
9	1		Pivot spring
10	1		Locking spring
11	2		Washer for pivot
12	1		Screw for pivot
13	1		Screw for lock assembly
14	1		Plastic cap for kickstand

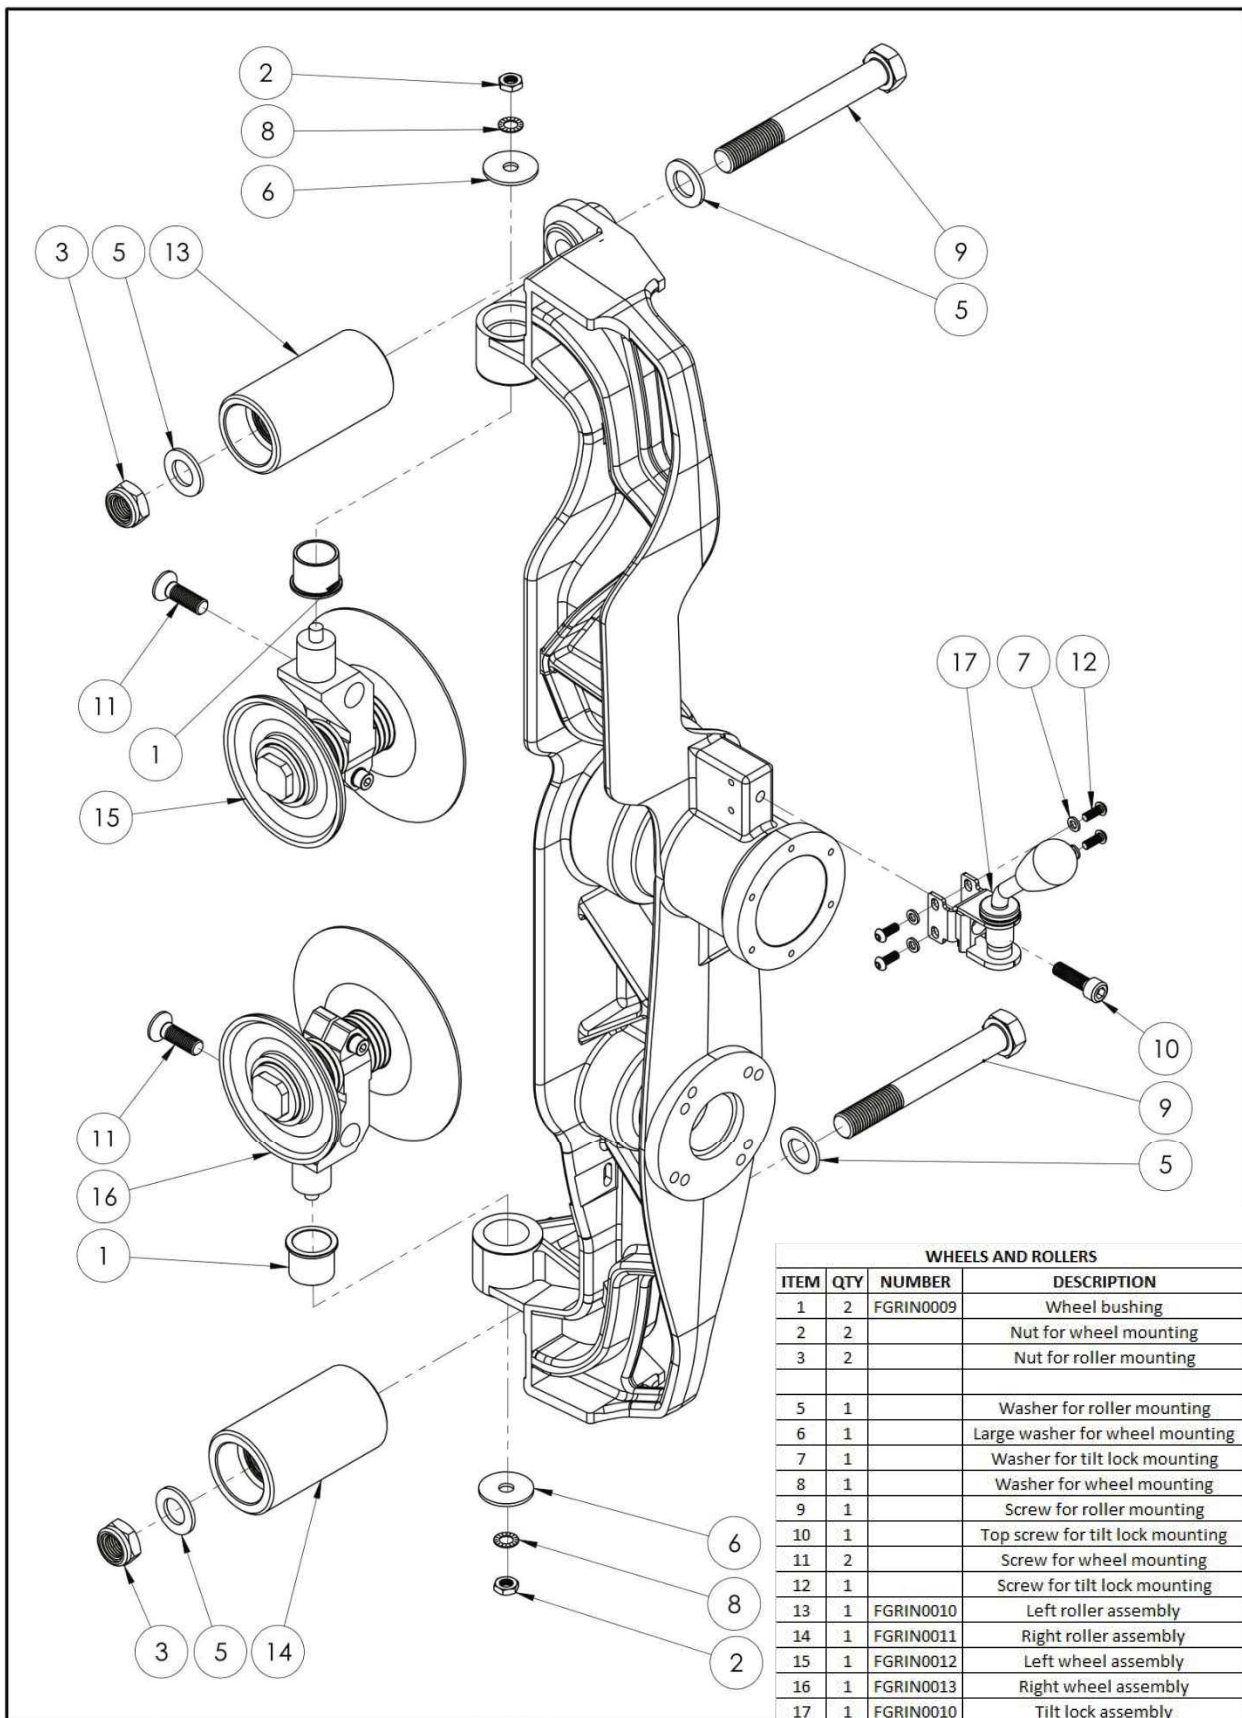

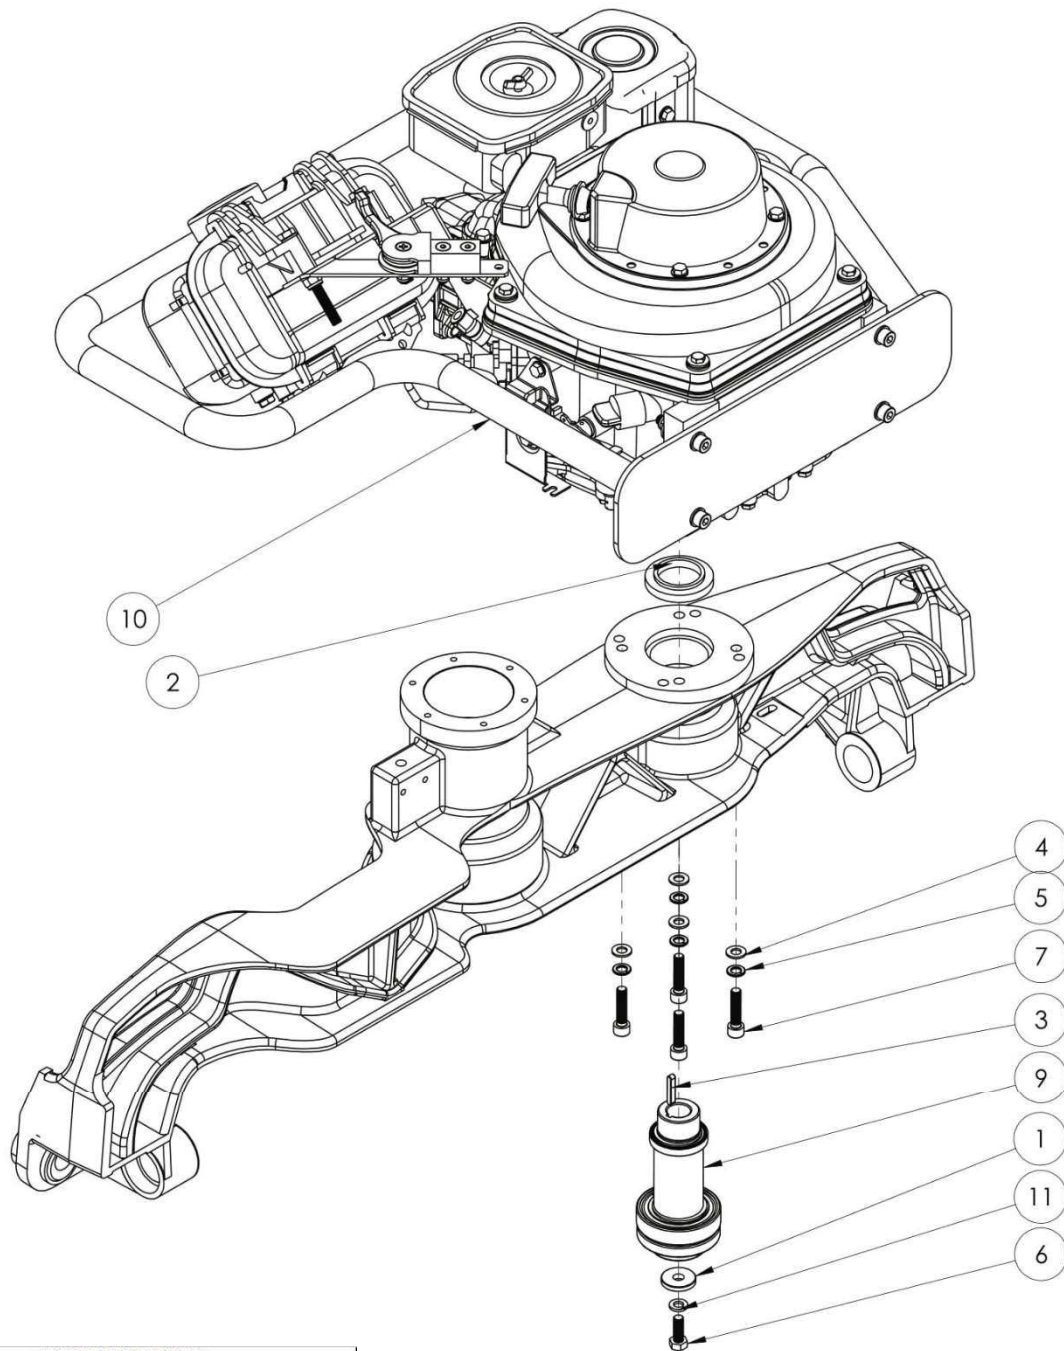


ENGINE MOUNTING			
ITEM	QTY	NUMBER	DESCRIPTION
1	1		Shaft mounting large washer
2	1		Engine mounting ring
3	1		Transmission key
4	4		Engine mounting large washer
5	4		Engine mounting washer
6	1		Shaft mounting screw
7	4		Engine mounting screw
9	1	FGRIN0015	Shaft assembly
10	1		Engine assembly
11	1		Shaft mounting washer

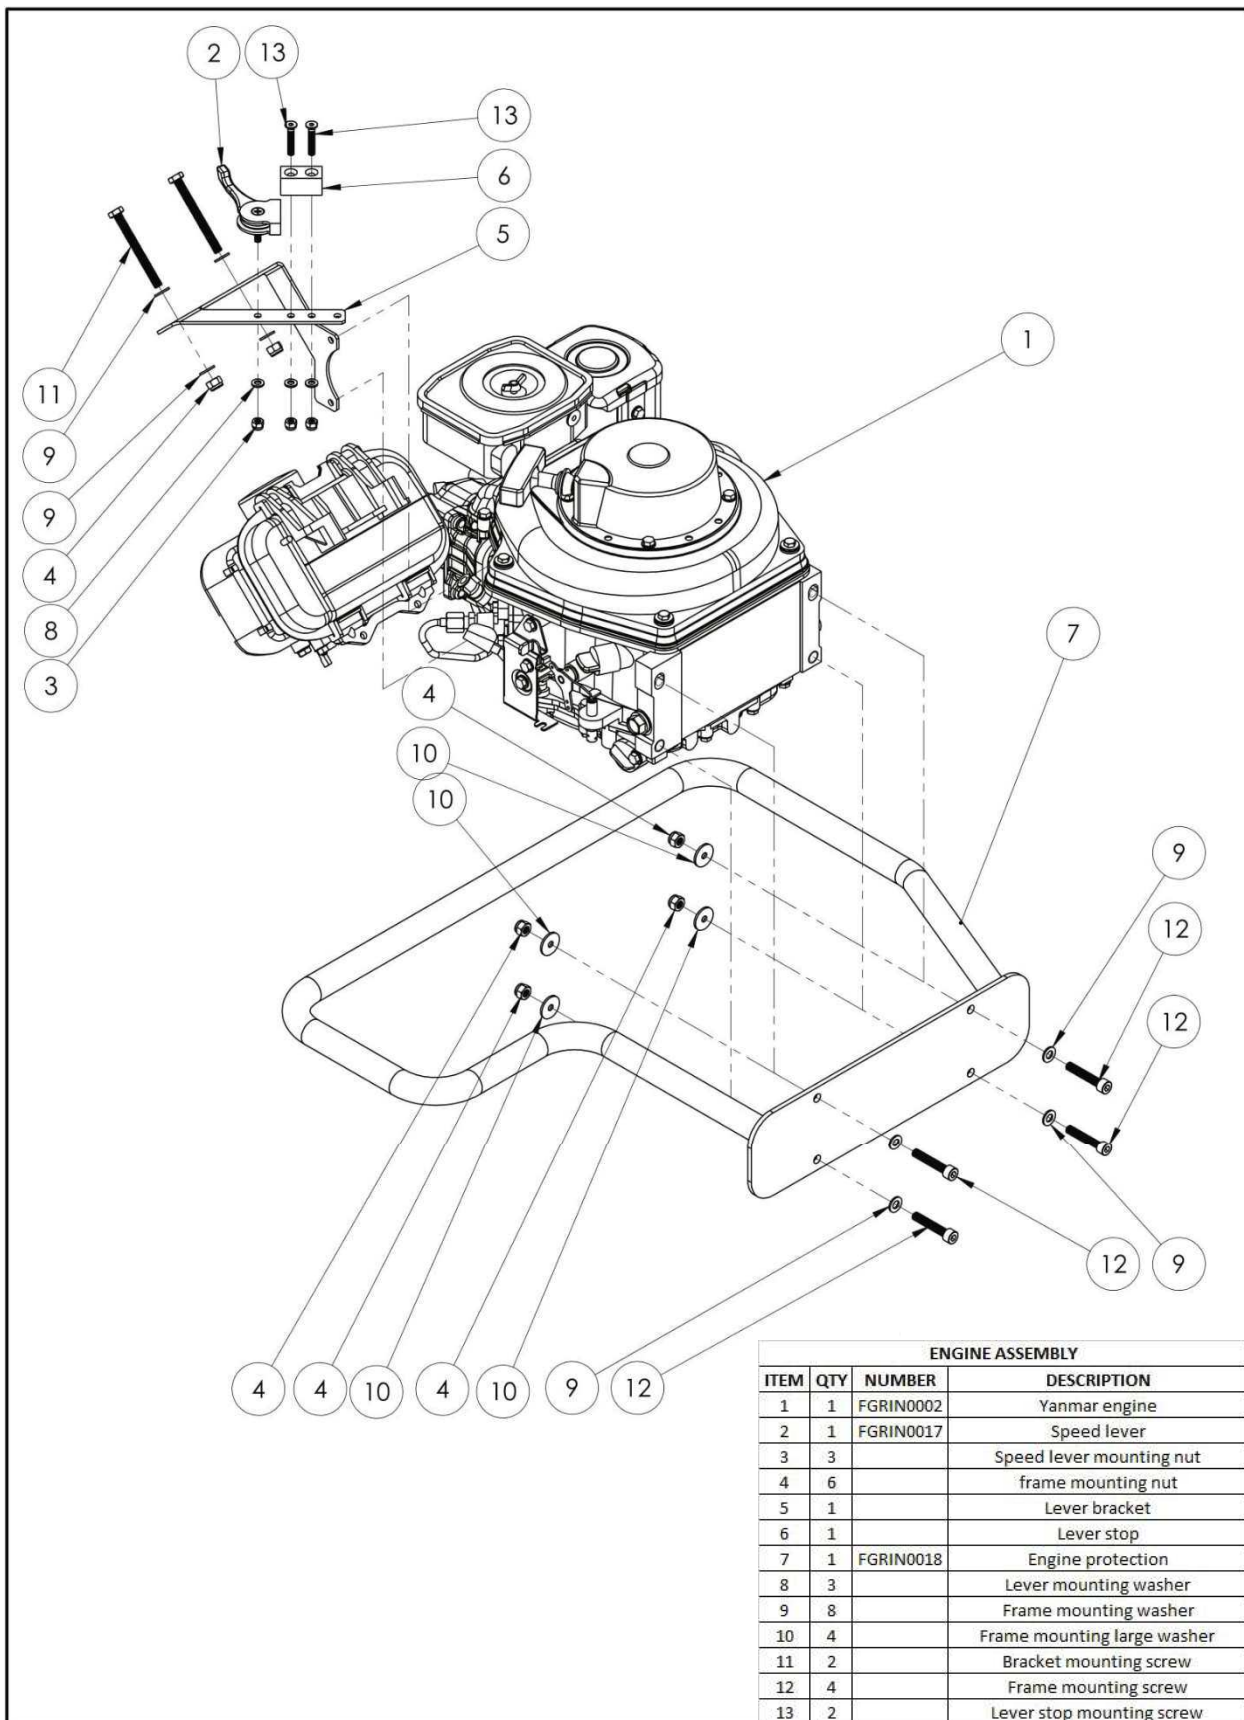

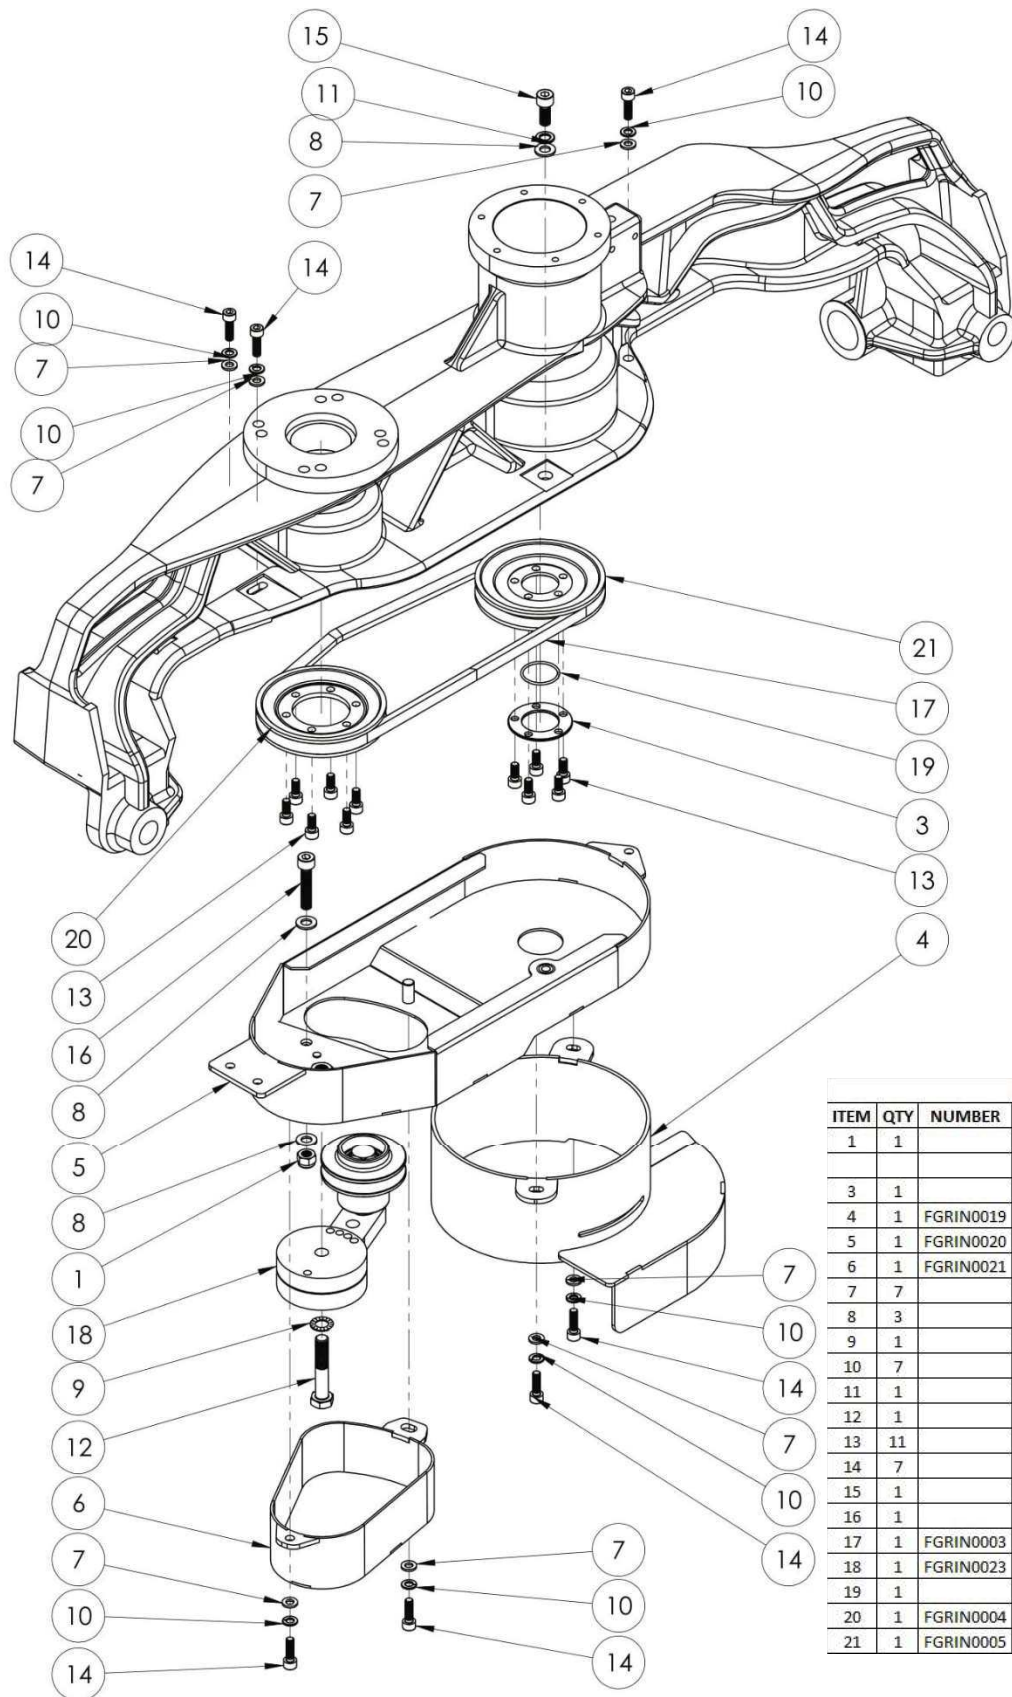

POWER TRANSMISSION			
ITEM	QTY	NUMBER	DESCRIPTION
1	1		Belt cover mounting nut
3	1		Engine pulley main washer
4	1	FGRIN0019	Spark guard
5	1	FGRIN0020	Belt cover
6	1	FGRIN0021	Tensioner cover
7	7		Cover mounting washer
8	3		Belt cover mounting washer
9	1		Tensioner mounting washer
10	7		Cover mounting spring washer
11	1		Belt cover mounting spring washer
12	1		Tensioner mounting screw
13	11		Pulley mounting screw
14	7		Cover mounting screw
15	1		Belt cover mounting screw
16	1		Cover mounting screw
17	1	FGRIN0003	Belt
18	1	FGRIN0023	Belt tensioner
19	1		Engine pulley ring
20	1	FGRIN0004	Engine pulley
21	1	FGRIN0005	Stone pulley

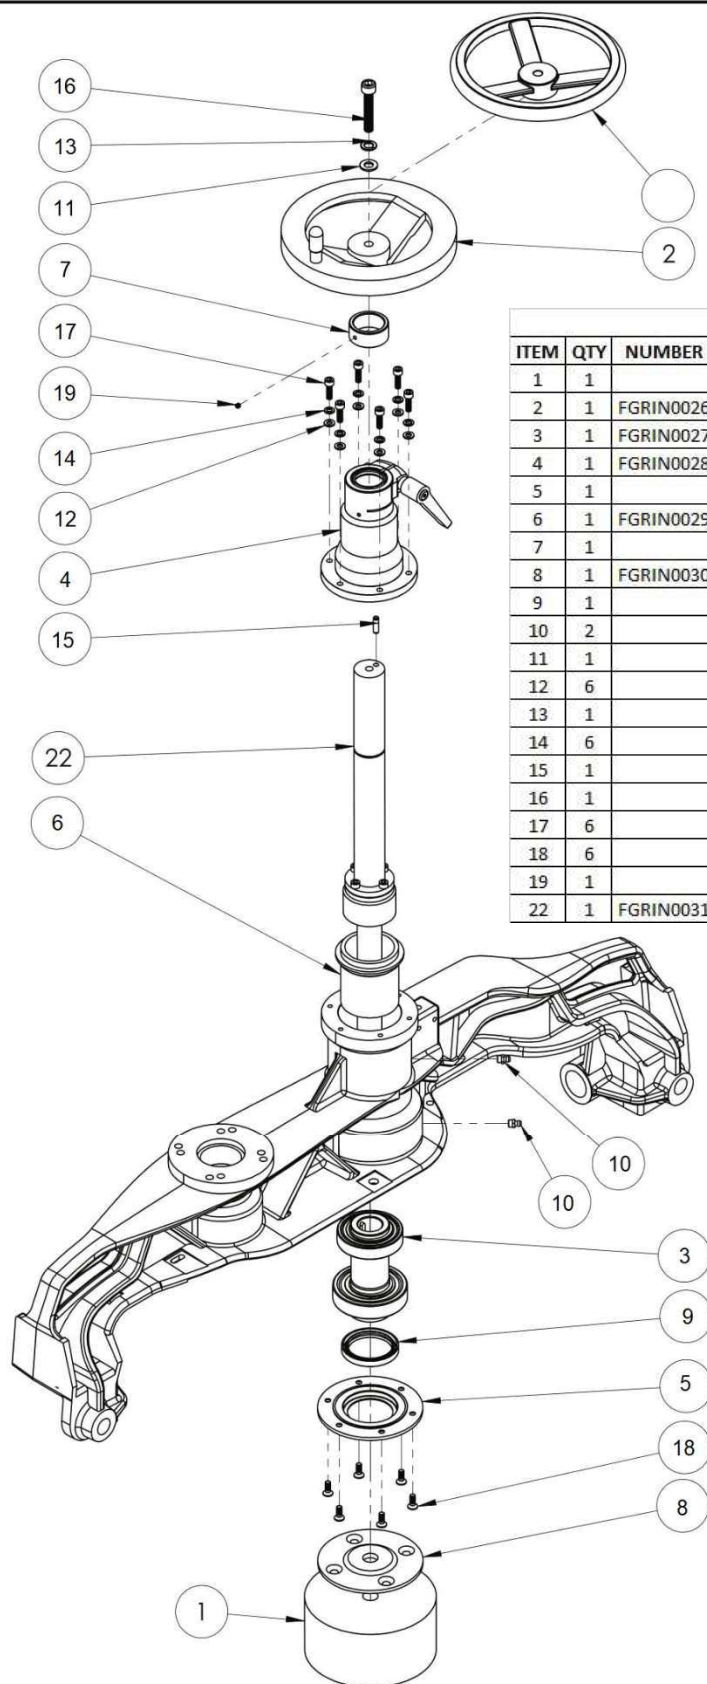

REGULATION AREA				
ITEM	QTY	NUMBER	DESCRIPTION	
1	1		Grinding wheel	
2	1	FGRIN0026	Height adjustment wheel	
3	1	FGRIN0027	Shaft assembly	
4	1	FGRIN0028	Aluminium housing assembly	
5	1		Shaft mounting plate	
6	1	FGRIN0029	Inner housing assembly	
7	1		Adjustment wheel adaptor	
8	1	FGRIN0030	Mounting plate	
9	1		Shaft mounting bearing	
10	2		Grease point	
11	1		Adjustment wheel mounting washer	
12	6		Aluminium housing mounting washer	
13	1		Adjustment wheel mounting spring washer	
14	6		Aluminium housing mounting spring washer	
15	1		Positioning pin	
16	1		Adjustment wheel mounting screw	
17	6		Aluminium housing mounting screw	
18	6		Shaft mounting screw	
19	1		Wheel adaptor mountig screw	
22	1	FGRIN0031	Upper shaft assembly	